Quick Start Guide WIRELESS TRIAXIAL TILL THE TER NODE V2.1

Magnet



1) CLAIM YOUR DEVICE

Navigate to https://my.Viotel.co to associate the device with your myViotel account and access device management and dashboard display.

2) MOUNT

Mount the device firmly to your chosen location using a secure mounting method: Adhesive, side mounting holes and/or pole mount bracket for threaded holes.

Exact leveling is not necessary, as the device can be zeroed in the dashboard

3) USING THE MAGNET

Wherever instructed to tap the node using the magnet, do so at the centre of the 'O' in the Viotel logo. Sequential taps must be performed within 3 seconds to be registered together.

Consult the User Manual if your Tiltmeter version is older and has a different decal.

4) CONFIRM MODE

Tap Once

- If the device is in Sleep, a solid blue light will appear from the status LED. Proceed to step 5.
- If the device is already Active, a green light then yellow light will appear from the status LED. The device takes 10 quick readings and uploads them. Proceed to step 6.

5) TOGGLE DEVICE ON

Tap Twice

 This will turn the device on followed quickly by 2 green LED flashes. The device may take several minutes to update.

6) VIEW DATA

Please head over to your node's Dashboard to begin seeing the data.


Please refer to the User Manual for more information and a full guide on this device. For queries, email support@viotel.co





| STATUS LIGHT | |
|--------------|----------------|
| GREEN | Active |
| BLUE | Sleep |
| PURPLE | Test Shots |
| RED | Device is Busy |

| COMMS LIGHT | |
|-------------|----------------------------|
| BLUE | Communicating with server |
| YELLOW | Collecting GPS Coordinates |
| RED | Unable to Communicate |

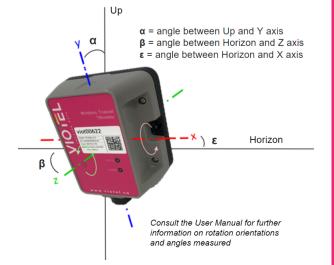

S W A R T E R D A T A

OUR RESONANCE

Resonance describes the phenomenon of increased amplitude that occurs when a an external force or a vibrating system is equal or close to a natural frequency of the system on which it acts.

Leveraging decades of experience in earthquake analysis and monitoring of mining seismicity, Viotel have a deep understanding of resonance and have developed a unique series of asset management solutions involving monitoring and analysis of vibrations and waveforms.



The Viotel Wireless Triaxial Tiltmeter features a high accuracy triaxial tilt sensor and is self-contained with internal battery (solar panel optional), GPS and cellular (CatM1) modem.

The tiltmeter is shipped pre-programmed and integrated. Simply mount the sensor in the desired location and power on for reliable, continuous, real-time monitoring.

www.viotel.co sales@viotel.co

